


How To Use a ZC-9 as a Scene Selector



Select a ZC-4 in the ID 1 position and check “Scene”. Then click the “Edit” box.

Configuration Wizard

ZonePRO Configuration Wizard - ZC Panel Configuration
Enter your ZC panel configuration information



#	Type	Name	Page	Paging Source				Edit
				Mic 1	Mic 2	S1	S2	
1	ZC 4	Zone Controller	<i>Scene Control</i>					
	Scene	<input checked="" type="checkbox"/>						
2	None	Zone Controller						
3	None	Zone Controller						
4	None	Zone Controller						
5	None	Zone Controller						
6	None	Zone Controller						
7	None	Zone Controller						
8	None	Zone Controller						
9	None	Zone Controller						
10	None	Zone Controller						
11	None	Zone Controller						
12	None	Zone Controller						

Cancel < Back Next > Finish

In the Edit window assign which position will select which scene. Not all of the binary positions will work. Below shows which binary positions work and which position on the ZC-9 they correspond to.

ZC-4 Binary Settings

ZC 4: Stage Address: 1

Address	Selected Scene
0	Do Nothing
1	Do Nothing
2	Do Nothing
3	Scene 1
4	Scene 2
5	Do Nothing
6	Scene 3
7	Scene 4
8	Do Nothing
9	Scene 5
10	Scene 6
11	Scene 7
12	Scene 8
13	Do Nothing
14	Do Nothing
15	Do Nothing

Buttons: Ok, Cancel

This screenshot shows another way of looking at which rotary position corresponds to which binary position.

