

Power on the mixer and connect to your controller




From the main screen above select the **FX** sends button and select it




Select the **EDIT** button on the FX sends page and select it



At the bottom of the **FX Edit** page there is a row of buttons labeled **REVERB**, **REVERB**, **DELAY** and **ROOM**.

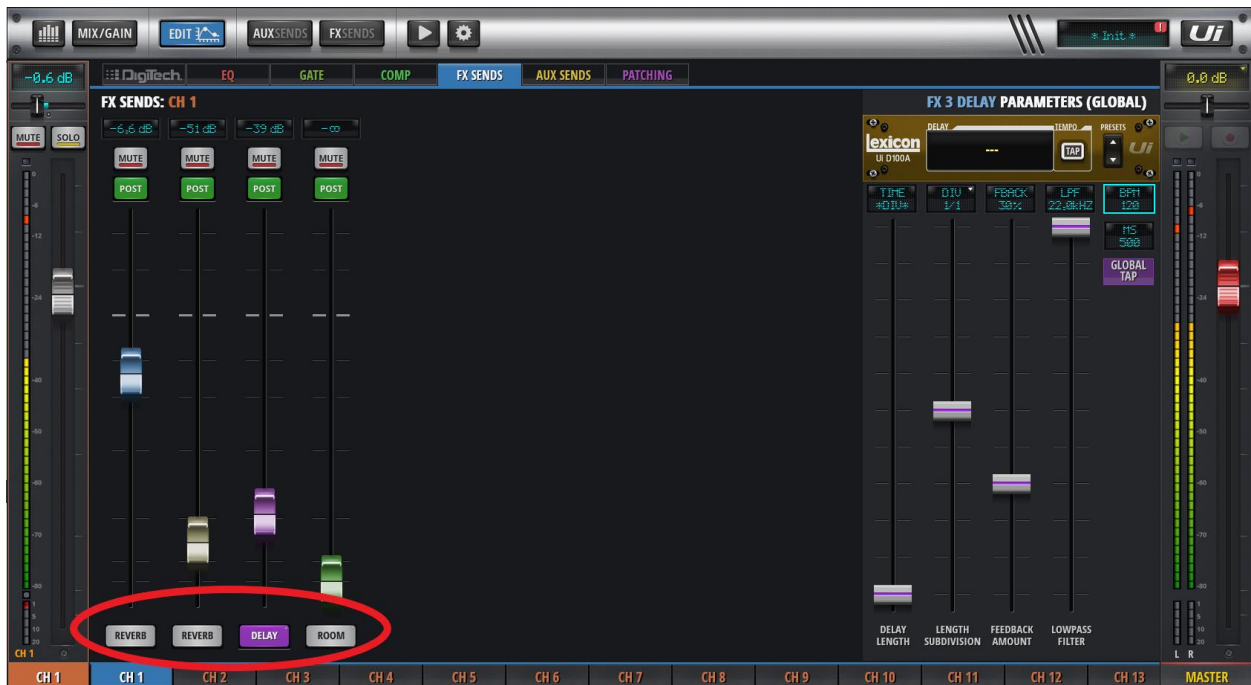

Hold your finger on the **DELAY** button until the dropdown list shows up

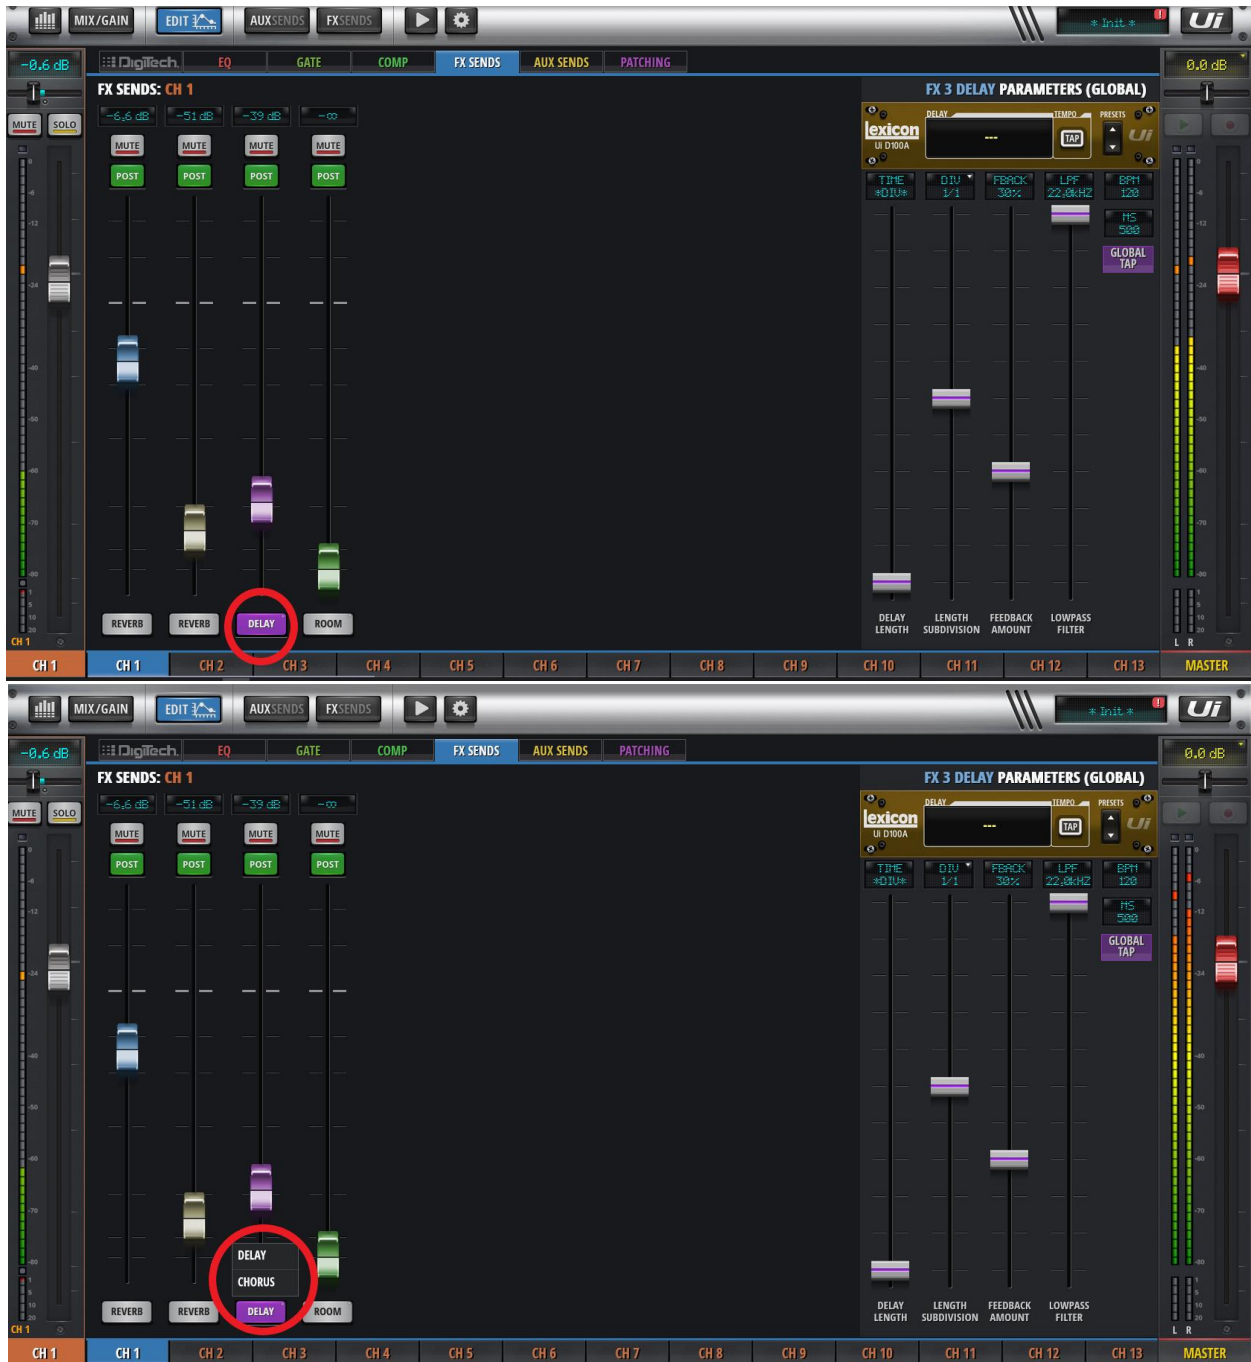

You now have **Chorus** as one of you **FX** selections on this **FX** channel





Select the **Chorus** and it will become the **FX** type for the **FX3** buss.

#### About HARMAN Professional Solutions

HARMAN Professional Solutions is the world's largest professional audio, video, lighting, and control products and systems company. Our brands comprise AKG Acoustics®, AMX®, BSS Audio®, Crown International®, dbx Professional®, DigiTech®, JBL Professional®, Lexicon Pro®, Martin®, Soundcraft® and Studer®. These best-in-class products are designed, manufactured and delivered to a variety of customers in markets including tour, cinema and retail as well as corporate, government, education, large venue and hospitality. For scalable, high-impact communication and entertainment systems, HARMAN Professional Solutions is your single point of contact. [www.harmanpro.com](http://www.harmanpro.com)