

Question:

How do I factory reset my Lexicon LXP-1?

Answer:

1. Power off the unit.
2. Turn the Program Knob to Plate D.
3. Set the Decay and Delay knobs to the down position (6 o'clock).
4. Press and hold in the MIDI button and apply power to the unit.
5. Release the MIDI button and then press it again, just once. The MIDI LED will flash once.
6. Turn the Program knob to HALL B and the Decay and Delay knobs one position CW (clockwise).
7. Press and release the MIDI button once. The MIDI LED will flash once.
8. Turn the program knob to Hall D.
9. Press and release the MIDI button once more. This time the MIDI LED will flash OFF/ON at a fast rate.
10. Power the unit OFF.
11. Power the unit ON.
12. Turn to any preset.

The memory clear operation is complete.

About HARMAN Professional Solutions

HARMAN Professional Solutions is the world's largest professional audio, video, lighting, and control products and systems company. Our brands comprise AKG Acoustics®, AMX®, BSS Audio®, Crown International®, dbx Professional®, DigiTech®, JBL Professional®, Lexicon Pro®, Martin®, Soundcraft® and Studer®. These best-in-class products are designed, manufactured and delivered to a variety of customers in markets including tour, cinema and retail as well as corporate, government, education, large venue and hospitality. For scalable, high-impact communication and entertainment systems, HARMAN Professional Solutions is your single point of contact. www.harmanpro.com