

Question:

How do I factory reset my MPX-1?

Answer:

Warning! This will erase all user register and patch information.

To reset the unit to the factory defaults, perform the following procedure:

1. With the unit powered down, hold the STORE button and power on the unit.
2. Once you see a "d" in the display, let go of the STORE button and press the EDIT button once.
3. Turn the data wheel until you see 2, then press STORE again.

The unit will reset and return to program mode.

About HARMAN Professional Solutions

HARMAN Professional Solutions is the world's largest professional audio, video, lighting, and control products and systems company. Our brands comprise AKG Acoustics®, AMX®, BSS Audio®, Crown International®, dbx Professional®, DigiTech®, JBL Professional®, Lexicon Pro®, Martin®, Soundcraft® and Studer®. These best-in-class products are designed, manufactured and delivered to a variety of customers in markets including tour, cinema and retail as well as corporate, government, education, large venue and hospitality. For scalable, high-impact communication and entertainment systems, HARMAN Professional Solutions is your single point of contact. www.harmanpro.com