

Frequently Asked Questions



v1.0

MPX-100 & 110 - Factory Reset

16-Apr-20

Question:

How do I factory reset my MPX-100/110?

Answer:

Warning: this will erase all user presets & settings.

- 1. Press and hold STORE while powering on.
- 2. STORE and TAP will flash rapidly (Press Tap or Bypass to exit without reinitializing.)
- 3. Release the STORE button and press it again to reinitialize.

About HARMAN Professional Solutions

HARMAN Professional Solutions is the world's largest professional audio, video, lighting, and control products and systems company. Our brands comprise AKG Acoustics®, AMX®, BSS Audio®, Crown International®, dbx Professional®, DigiTech®, JBL Professional®, Lexicon Pro®, Martin®, Soundcraft® and Studer®. These best-in-class products are designed, manufactured and delivered to a variety of customers in markets including tour, cinema and retail as well as corporate, government, education, large venue and hospitality. For scalable, high-impact communication and entertainment systems, HARMAN Professional Solutions is your single point of contact. www.harmanpro.com





















