

v1.0

Network Configuration Reset of a Soundcraft Ui Mixer

15-Sep-22

This procedure does NOT do a full reset of the mixer or reset any passwords. This procedure only resets the Network Configuration settings.

1. Power off the mixer using the power switch
2. While the mixer is powered off, press and hold the reset button on the side of the mixer. This button is recessed inside a small hole about the size of a ball point pen.
3. Power on the mixer while still holding the reset button.
4. Continue holding the Reset button for 10 seconds and release.
5. Let the mixer sit undisturbed for approximately 3 minutes while it performs the reset.
6. Power the mixer off and back on again.
7. When the blue "Wi-Fi" light stops blinking and stays on solid, you should be able to discover and connect to the internal Hotspot again.

About HARMAN Professional Solutions

HARMAN Professional Solutions is the world's largest professional audio, video, lighting, and control products and systems company. Our brands comprise AKG Acoustics®, AMX®, BSS Audio®, Crown International®, dbx Professional®, JBL Professional®, Lexicon Pro®, Martin®, and Soundcraft®. These best-in-class products are designed, manufactured and delivered to a variety of customers in markets including tour, cinema and retail as well as corporate, government, education, large venue and hospitality. For scalable, high-impact communication and entertainment systems, HARMAN Professional Solutions is your single point of contact. www.harman.com