

v1.0

Ui Mixer Channels not showing in GUI

12-Jan-23

Question:

Why can't I see all my input channels, aux channels, or other options in my Ui mixer.

Answer:

This is usually due to a corrupt Cache of the web control page in your browser.

The solution to this problem is to clear the browser history and cookies. This is different for each browser. Below you will find links to a step by step guide for how to do this in each of the most popular browsers.

Google Chrome:

<https://support.google.com/accounts/answer/32050?hl=en&co=GENIE.Platform%3DDesktop>

Apple Safari for IOS:

<https://support.apple.com/en-us/HT201265>

Apple Safari for Mac OS X:

<https://support.apple.com/guide/safari/clear-your-browsing-history-sfri47acf5d6/mac>

Mozilla Firefox:

<https://support.mozilla.org/en-US/kb/how-clear-firefox-cache>

About HARMAN Professional Solutions

HARMAN Professional Solutions is the world's largest professional audio, video, lighting, and control products and systems company. Our brands comprise AKG Acoustics®, AMX®, BSS Audio®, Crown International®, dbx Professional®, JBL Professional®, Lexicon Pro®, Martin®, and Soundcraft®. These best-in-class products are designed, manufactured and delivered to a variety of customers in markets including tour, cinema and retail as well as corporate, government, education, large venue and hospitality. For scalable, high-impact communication and entertainment systems, HARMAN Professional Solutions is your single point of contact. www.harman.com