

v1.0

Changing the FX Selection on the Ui Mixer

17-Jan-23


Question:

How do I access the Chorus on the Ui FX Sends?


Answer:

On the Ui mixer you can change the FX type on FX Bus 2, 3 & 4. To change the FX type:


Press the "EDIT" button.

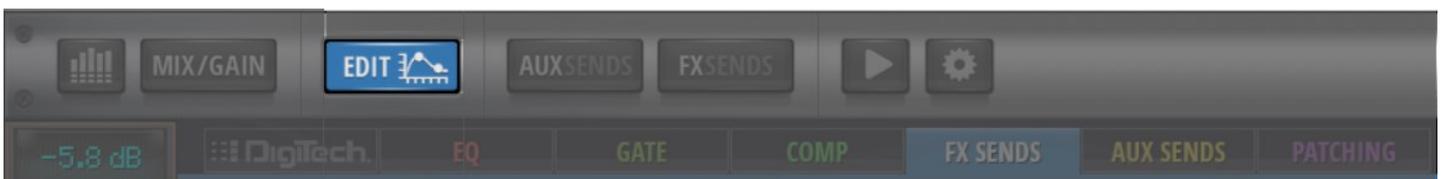

Press the "FX SENDS" tab.

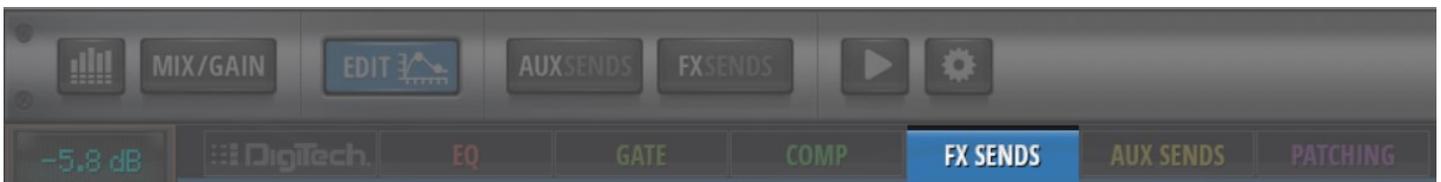

Long press the "DELAY" button below the fader until you see the popup giving you the choice between delay and chorus. Select "CHORUS".

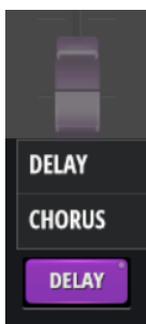

- FX 1 is a fixed selection for Reverb.
- FX 2 & 4 can select between Reverb and Delay.
- FX 3 can select between Delay and Chorus.

This selection will change the FX model and presets available for that bus.

About HARMAN Professional Solutions

HARMAN Professional Solutions is the world's largest professional audio, video, lighting, and control products and systems company. Our brands comprise AKG Acoustics®, AMX®, BSS Audio®, Crown International®, dbx Professional®, JBL Professional®, Lexicon Pro®, Martin®, and Soundcraft®. These best-in-class products are designed, manufactured and delivered to a variety of customers in markets including tour, cinema and retail as well as corporate, government, education, large venue and hospitality. For scalable, high-impact communication and entertainment systems, HARMAN Professional Solutions is your single point of contact. www.harman.com