

v1.0

Signature FX Return to Default on Power Cycle

18-Jan-23

Question:

Why is the FX on my Signature mixer always at the first preset when I power on? I set my FX to my preferred settings and when I power on mixer, the FX is reset to first preset and my settings are lost.

Answer:

There is no memory to store preset parameters and settings in the Signature mixer series and the mixer will always be on the #1 preset every time it is powered up. This is working as designed and can not be changed.

About HARMAN Professional Solutions

HARMAN Professional Solutions is the world's largest professional audio, video, lighting, and control products and systems company. Our brands comprise AKG Acoustics®, AMX®, BSS Audio®, Crown International®, dbx Professional®, JBL Professional®, Lexicon Pro®, Martin®, and Soundcraft®. These best-in-class products are designed, manufactured and delivered to a variety of customers in markets including tour, cinema and retail as well as corporate, government, education, large venue and hospitality. For scalable, high-impact communication and entertainment systems, HARMAN Professional Solutions is your single point of contact. www.harman.com