



## Frequently Asked Questions



v1.0

### PRX800 Series Flashing Blue LED

30-Jan-23

#### Question:

My PRX800 series speaker doesn't produce any sound and the blue LED (WI-FI link and Power) only flashes. What should I do?

#### Answer:

You may have accidentally switched the unit to "Access point" mode. Press and hold the WI-FI CONNECT button for 2 seconds to switch between "Access Point" and "Normal" network operating modes. By default, the speaker is in "Normal" network operating mode.

If that did not resolve your issue, perform a factory reset.

To factory reset the PRX800 series:

- Press and hold the POLARITY (SYSTEM EQ, NORM/BOOST or MAIN/MONITOR) button.
- Turn the speaker power back on.
- Keep the button held for 5 seconds or until the LED above the POLARITY (SYSTEM EQ, NORM/BOOST or MAIN/MONITOR) button flashes briefly.

#### About HARMAN Professional Solutions

HARMAN Professional Solutions is the world's largest professional audio, video, lighting, and control products and systems company. Our brands comprise AKG Acoustics®, AMX®, BSS Audio®, Crown International®, dbx Professional®, JBL Professional®, Lexicon Pro®, Martin®, and Soundcraft®. These best-in-class products are designed, manufactured and delivered to a variety of customers in markets including tour, cinema and retail as well as corporate, government, education, large venue and hospitality. For scalable, high-impact communication and entertainment systems, HARMAN Professional Solutions is your single point of contact. [www.harman.com](http://www.harman.com)

AKG

AMX



dbx



Lexicon

Martin

Soundcraft