 


JBL Manual Factory Reset Guide

 
EON 600 series

With the unit powered OFF
 Press and hold **BOOT** and **EQ+**
 While pressing and holding power ON,
 continue to hold until all EQ Presets Flash

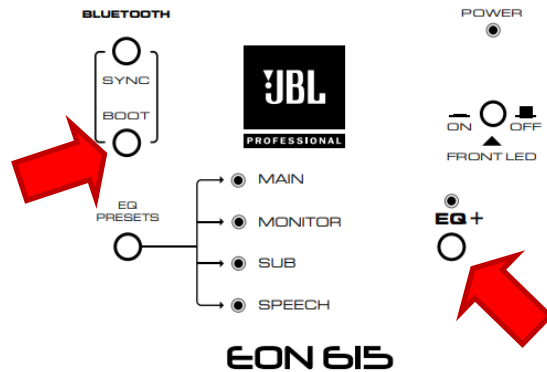


EON710, EON712 & EON715

With the unit powered ON
 Press and hold **CH1** and **CH2**
 until the LCD screen turns off

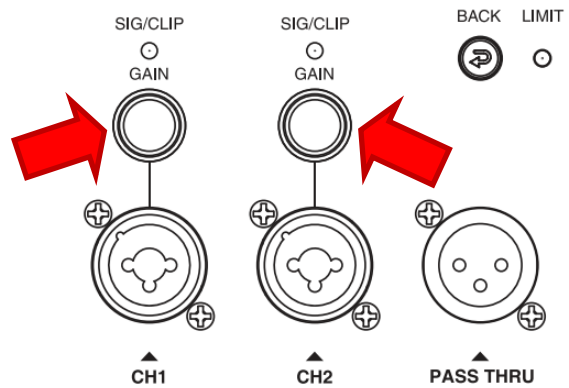


EON718S

 With the unit powered ON
 Press and hold **POWER** and **BACK**
 until the LCD screen turns off

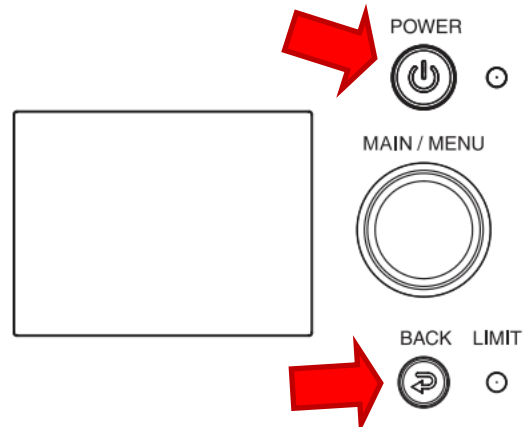


EON ONE COMPACT

 With the unit powered On
Press and hold **PHANTOM** and **DUCKING**
until all Channels Flash

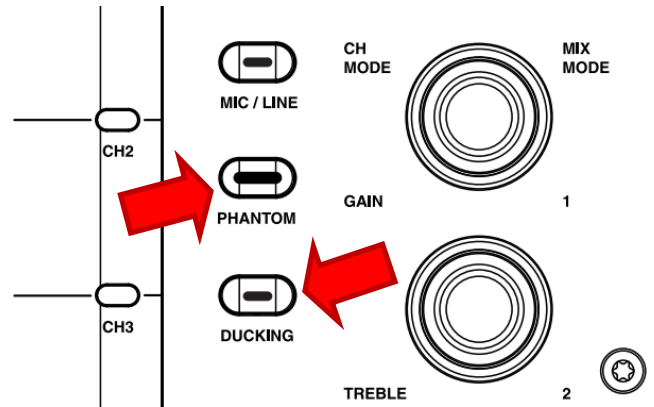


EON ONE MK2

 With the unit powered On
Press and hold **MAIN** and **CH4**
until the LCD screen turns off

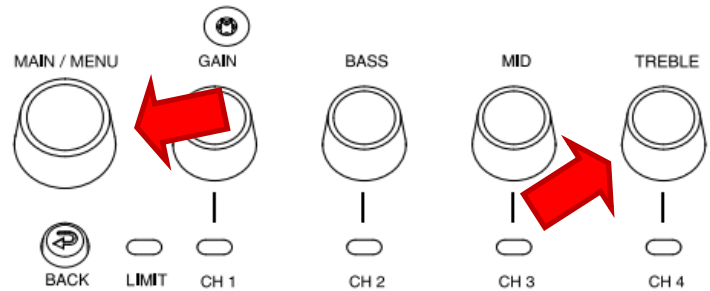


IRX108BT & IRX112BT

 With the unit powered On
Press and hold **BLUETOOTH**
until Power and EQ Presets Flash

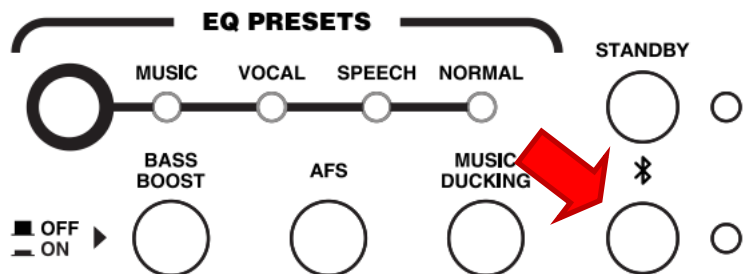


IRX115S

 With the unit powered On
Press and hold **X-OVER** and **POLARITY**
until all LEDs Flash, sub will power off.

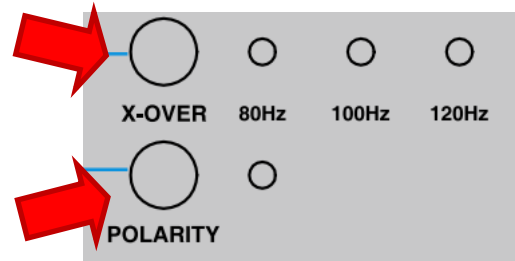


IRX ONE

 With the unit powered ON:
Press and hold **PHANTOM 48V** and **DUCKING**
until all LEDs flash and unit
reboots.

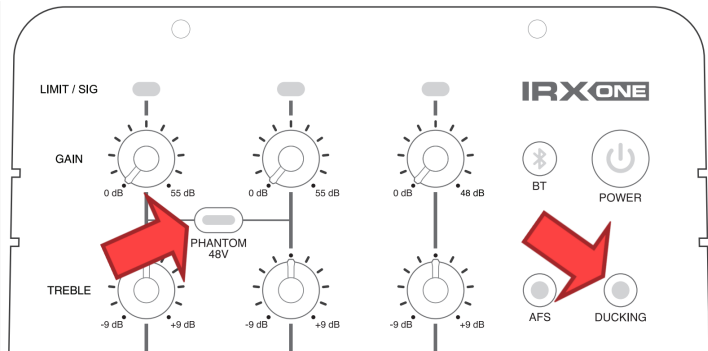


PRX ONE

 With the unit powered On
Press and hold **MASTER** and **BACK**
until the LCD screen turns off

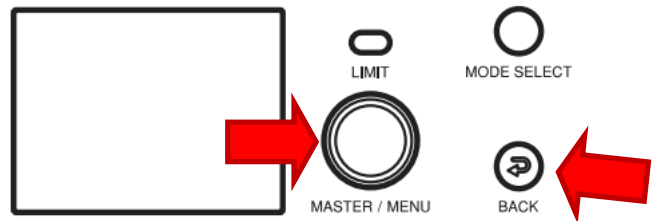


PRX800 Series

 With the unit powered OFF
Press and hold the **Upper Left Button**
(NORM/BOOST, MAIN/MON or POLARITY)
While pressing and holding power ON,
continue to hold for 5 seconds

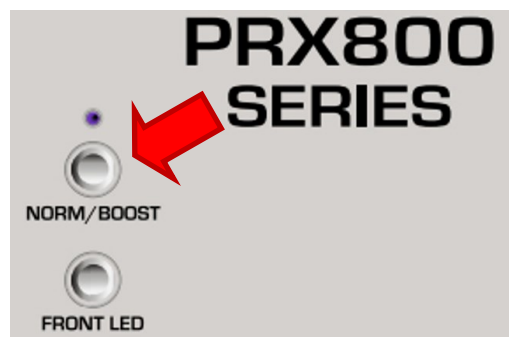

PRX900

 With the unit powered ON
Press and hold **Main/Menu and BACK**
until the LCD screen turns off

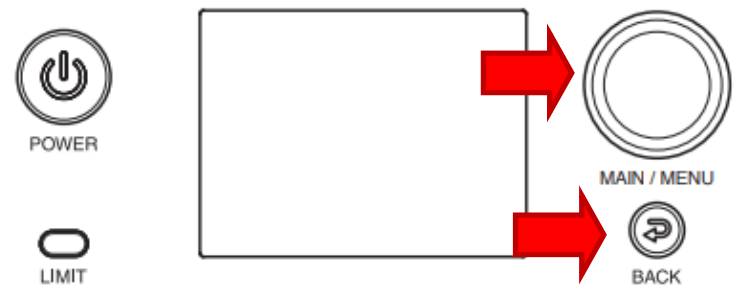

7 SERIES, 708P and 705P

With the unit powered OFF
Press and hold **BACK and MENU**
While pressing and holding power ON,
continue to hold until "FACTORY_RESET"
appears on the LCD Screen

