 


JBL Manual Factory Reset Guide


EON 600 series

With the unit powered OFF
 Press and hold **BOOT** and **EQ+**
 While pressing and holding power ON,
 continue to hold until all EQ Presets Flash

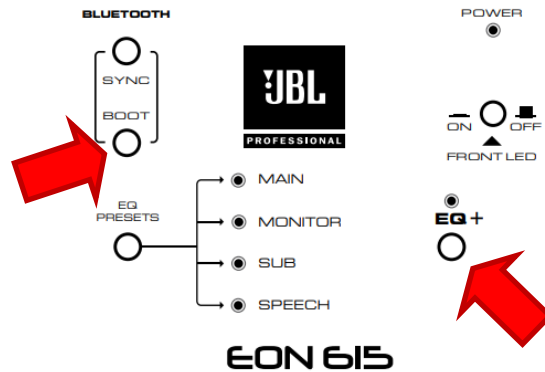


EON710, EON712 & EON715

With the unit powered ON
 Press and hold **CH1** and **CH2**
 until the LCD screen turns off

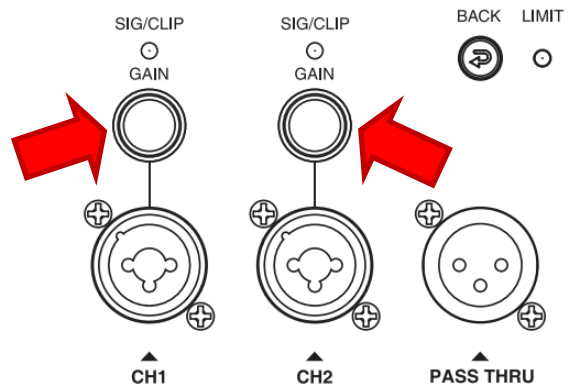


EON718S

With the unit powered ON
 Press and hold **MAIN/MENU** and **BACK**
 until the LCD screen turns off

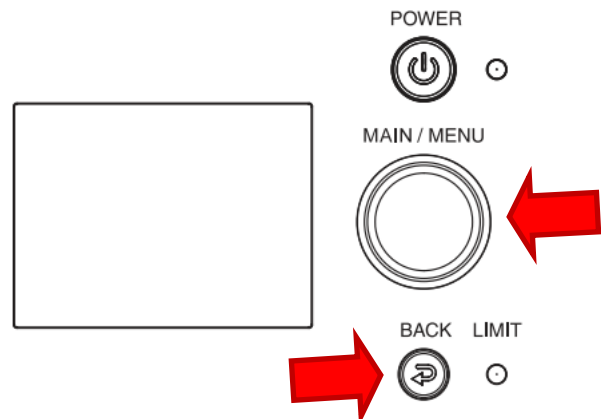


EON ONE COMPACT

With the unit powered On
Press and hold **PHANTOM** and **DUCKING**
until all Channels Flash

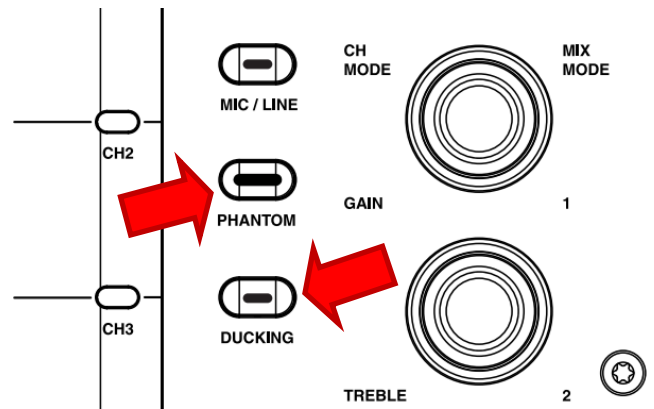


EON ONE MK2

With the unit powered On
Press and hold **MAIN** and **CH4**
until the LCD screen turns off

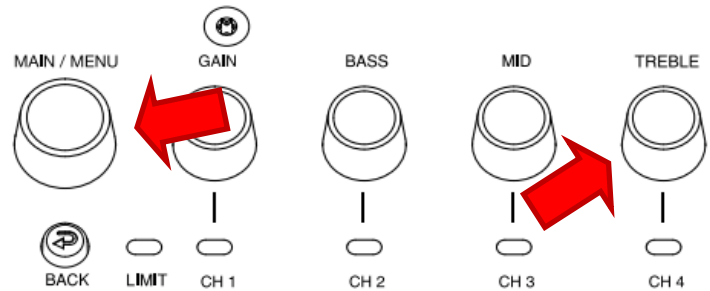

IRX108BT & IRX112BT


With the unit powered On
Press and hold **BLUETOOTH**
until Power and EQ Presets Flash

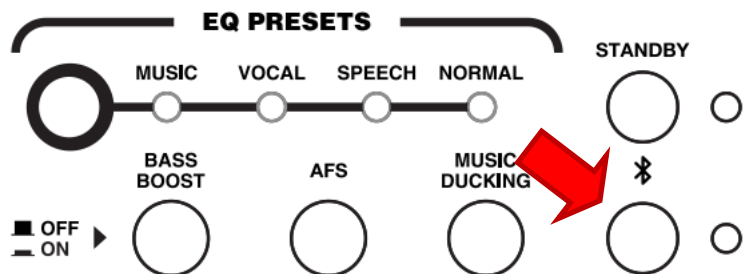

IRX115S

With the unit powered On


Press and hold **X-OVER** and **POLARITY** until all LEDs Flash, sub will power off.

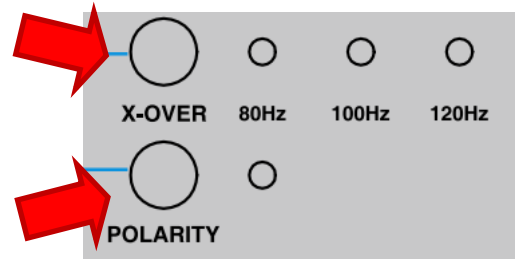

PRX ONE

With the unit powered On

Press and hold **MASTER** and **BACK** until the LCD screen turns off

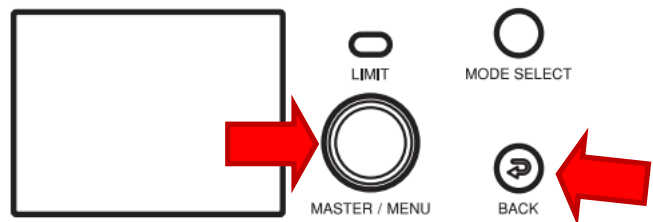


PRX800 Series

With the unit powered OFF


Press and hold the **Upper Left Button (NORM/BOOST, MAIN/MON or POLARITY)**

While pressing and holding power ON, continue to hold for 5 seconds

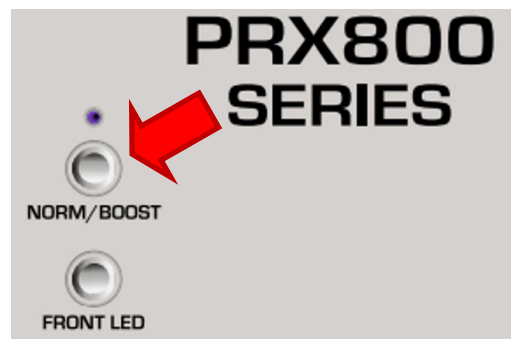

PRX900

With the unit powered ON
Press and hold **Main/Menu and BACK**
until the LCD screen turns off

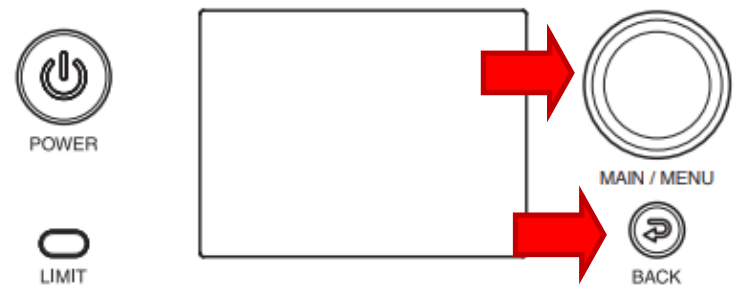

7 SERIES, 708P and 705P

With the unit powered OFF
Press and hold **BACK and MENU**
While pressing and holding power ON,
continue to hold until "FACTORY_RESET"
appears on the LCD Screen

