



v1.0

## C414 XLS/XLII Lock Mode

13-Apr-23

### Question:

Why are the polar pattern, pre-attenuation pad or bass cut filter settings not changing on my C414 XLS/XLII?

### Answer:

In Lock Mode, all controls on the microphone are disabled so the settings you selected for a specific application (polar pattern, pre-attenuation pad, bass cut filter) cannot be changed unintentionally.

### Enter Lock Mode

Press and hold one of the arrows on the polar pattern selector for at least 2 seconds. All controls are disabled and remain disabled even if phantom power has been interrupted (e.g., if you disconnected the microphone and connected it again later).

To indicate that the microphone is in Lock Mode, the LED(s) above the currently selected polar pattern will be lit red momentarily when you press any key.

### Exit Lock Mode

To unlock the selectors, press and hold the polar pattern selector for at least 2 seconds.

#### About HARMAN Professional Solutions

HARMAN Professional Solutions is the world's largest professional audio, video, lighting, and control products and systems company. Our brands comprise AKG Acoustics®, AMX®, BSS Audio®, Crown International®, dbx Professional®, JBL Professional®, Lexicon Pro®, Martin®, and Soundcraft®. These best-in-class products are designed, manufactured and delivered to a variety of customers in markets including tour, cinema and retail as well as corporate, government, education, large venue and hospitality. For scalable, high-impact communication and entertainment systems, HARMAN Professional Solutions is your single point of contact. [www.harman.com](http://www.harman.com)

