

The EON 700 Series utilizes the latest acoustic science, transducer designs, cabinet materials, and advanced DSP to deliver high power and extraordinary performance for both portable and installed applications.

Today, we're going to show you how to factory reset your speaker. There are two methods to factory reset this unit. The first involves accessing the menu from the LCD screen, and the second is a manual hard reset. The first method is a simple five step method. While your unit is powered on, click the main/menu rotary button once to enter into the menu page as shown here. Next, turn the rotary clockwise to highlight settings, then click the rotary button to select. Turn the rotary clockwise again to highlight "Factory Reset". Click the rotary button to continue. The LEDs will then flash repeatedly for a few seconds until the entire unit powers off. The unit will then power on, and the factory reset will be complete. The manual hard reset is different for the Eon700 tops and sub. Start with the speaker powered on. For the Eon710, 712, and 715, press and hold the channel 1 and channel 2 encoders until the LCD powers off. For the Eon718S, press and hold the POWER and BACK buttons until the LCD powers off. The speaker will reboot on its own when the reset is complete.

For more news, product information, and troubleshooting tips, visit us at JBLPro.com or our anytime help center.